


---

## ECU Input Buffer Installation Notes

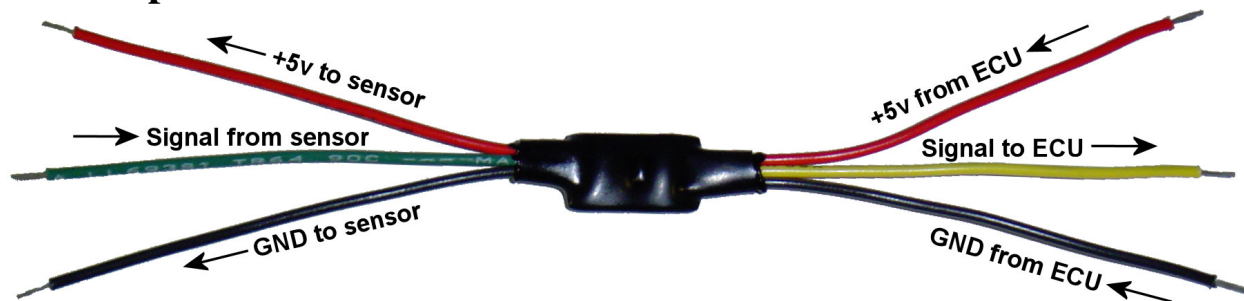

**NOTES:** The two **RED** and the two **BLACK** wires are tied together internally. One pair must be supplied with power, typically available from the same connector as used for the “**Signal to ECU**” connection. The other pair can be used to power the sensor if needed (e.g., a pressure sensor). **CUT THE BARE, UNUSED POWER WIRES IF YOU DO NOT NEED THEM! DO NOT LEAVE THEM EXPOSED!**

ECU Wiring Docs: [//www.ecmtuning.com/ecuwiring](http://www.ecmtuning.com/ecuwiring)

